


How to exchange the standard bar with the extended bar

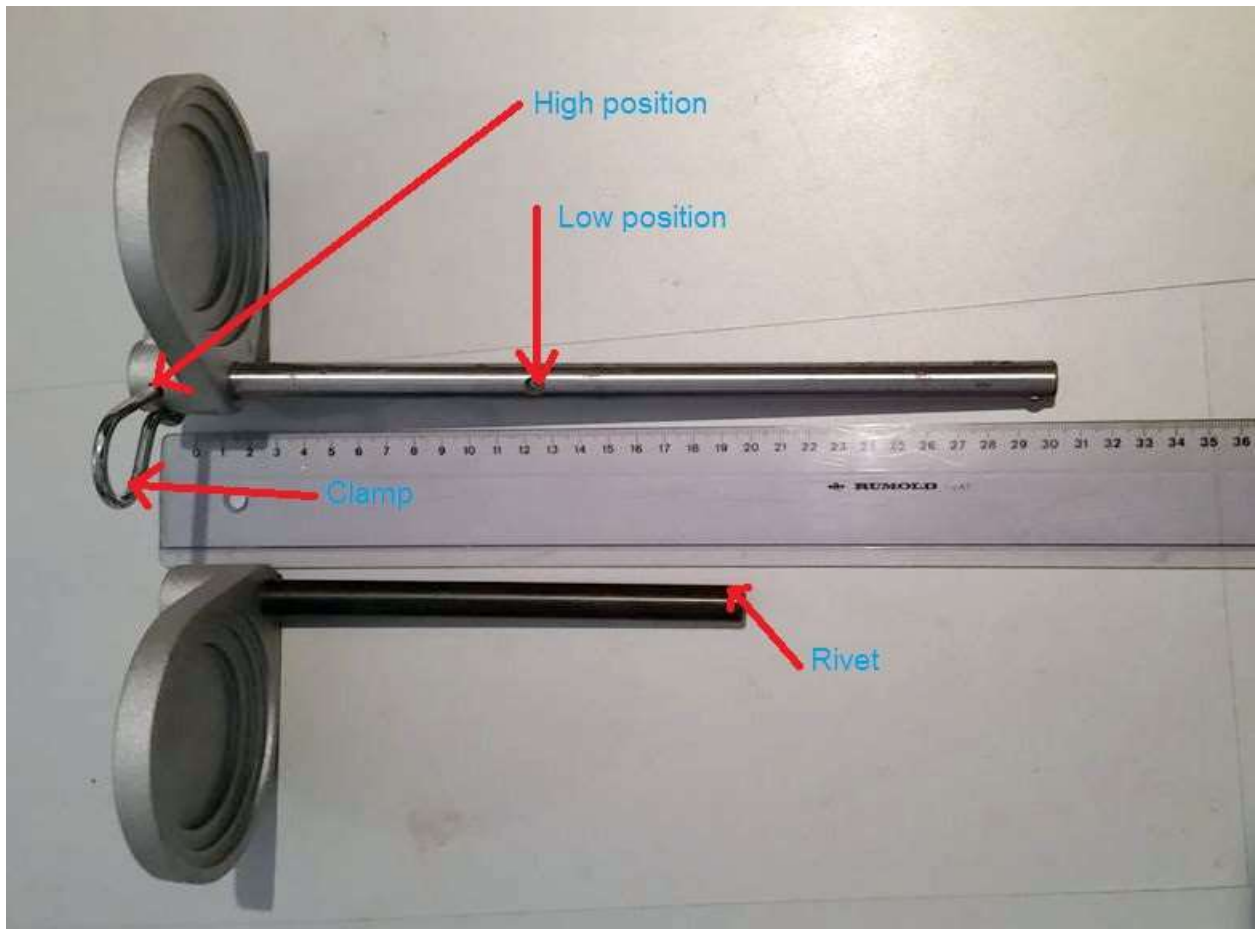

1 - Remove the standard bar:

- 1- Clean the Aerosolv puncture tool and remove the unit from the drum.
- 2- Take the unit in the workshop and heat the rivet with a heat source, like a blowtorch or heat gun.
- 3- Attention: do not inhale the fumes from the heated glue.
- 4- Remove the hot rivet with a set of pliers.
- 5- Remove the standard bar from the unit.

2 - Install the extended bar:

- 6- Take the clamp and lid from the extended bar and insert the bar in the unit.
- 7- Place the lid over the bar and fix it with the clamp.
- 8- Mount the Aerosolv unit on the drum.
- 9- Use the 'high position' for large aerosol cans and the 'low position' for regular aerosol cans.
- 10- After use, choose 'low position' to close the opening of the unit.